 

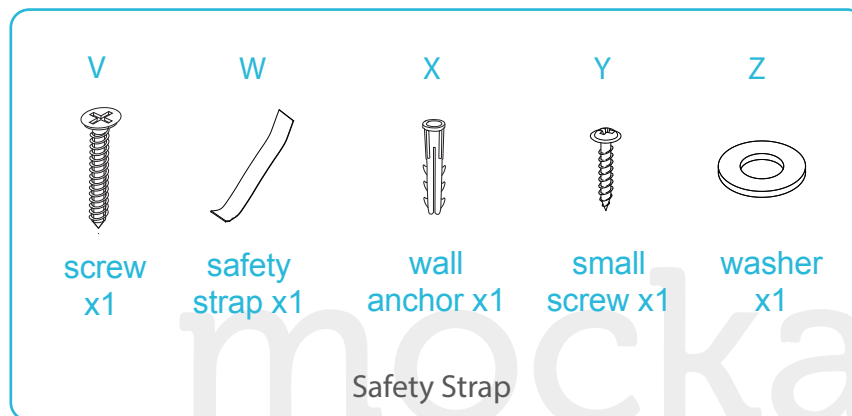


# Jimmy Ladder


## ASSEMBLY INSTRUCTIONS

# mocka

Thank you for your purchase.  
Please follow the instructions below for correct assembly.

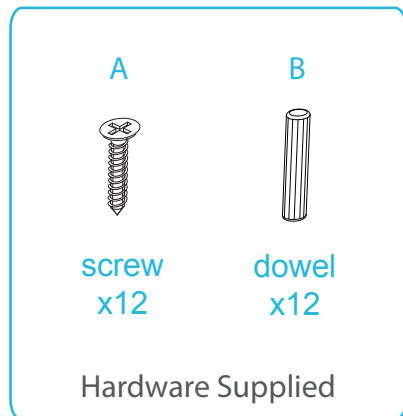

**WARNING:** Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

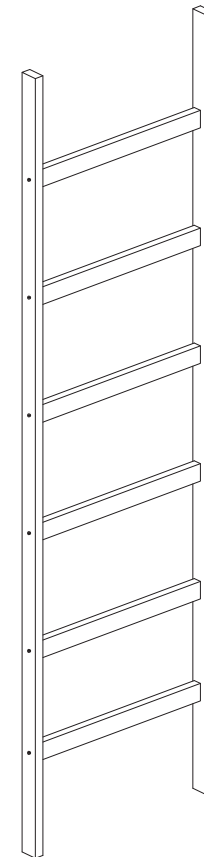


# Jimmy Ladder

## ASSEMBLY INSTRUCTIONS


mocka

1

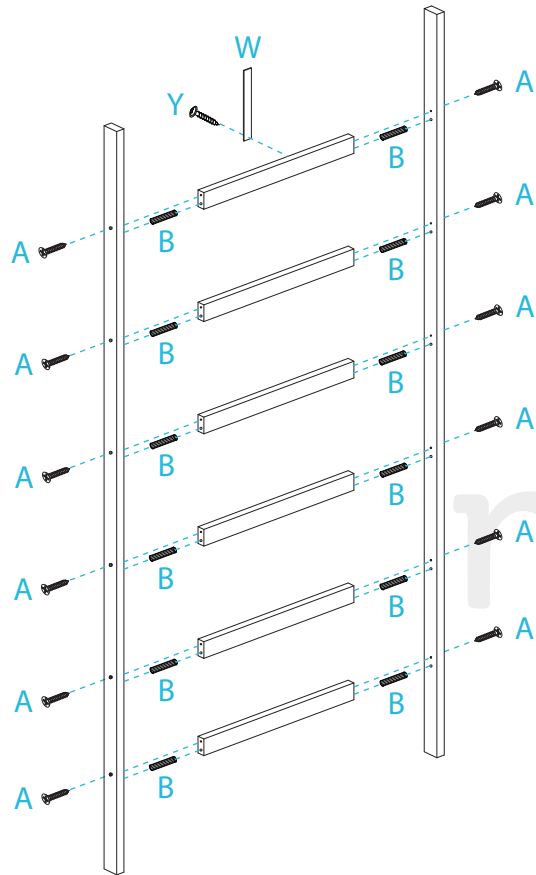

Attach the ladder rungs to each side panel using 12x dowels (B) and 12x screws (A) as shown. Tighten with a screwdriver. For the safety strap, attach the strap (W) to the back of the top rung with 1x small screw (Y).

2

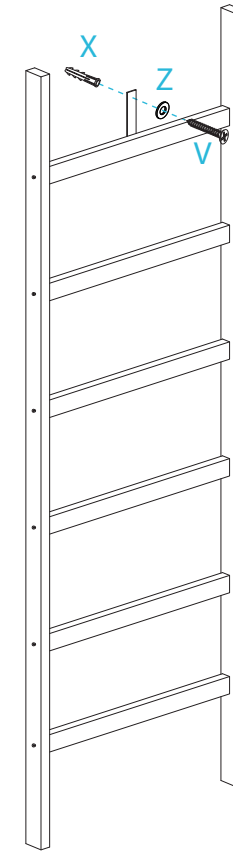

Attach the other end of the strap (W) to the wall using 1x washer (Z), 1x wall anchor (X) and 1x screw (V). You're done, enjoy!