
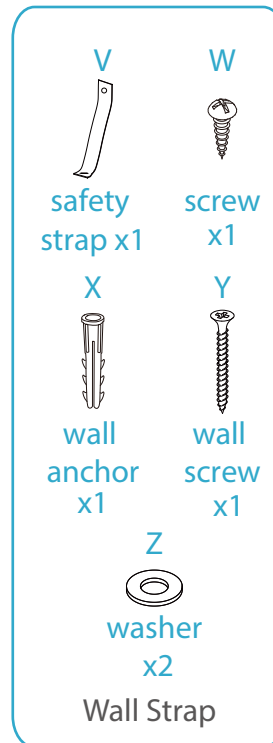


Dakota Bookcase

 

Assembly Instructions

Thank you for your purchase.
Please follow the instructions below for correct assembly.

mocka

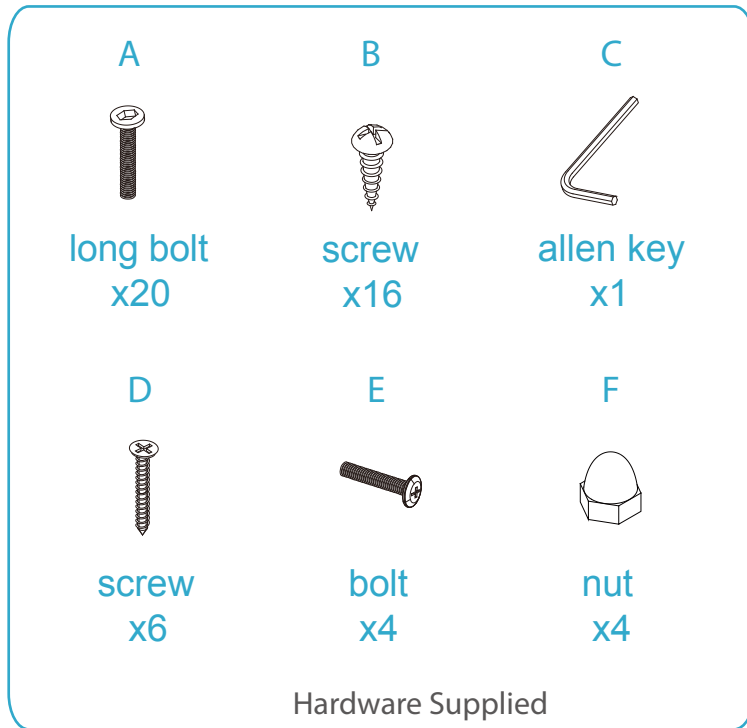

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

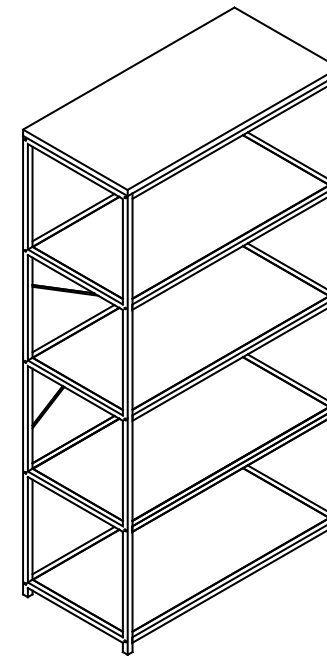


Phillips screwdriver required
For quicker assembly, we recommend the
use of a power drill on a low-speed setting.

Dakota Bookcase

Assembly Instructions


mocka

1

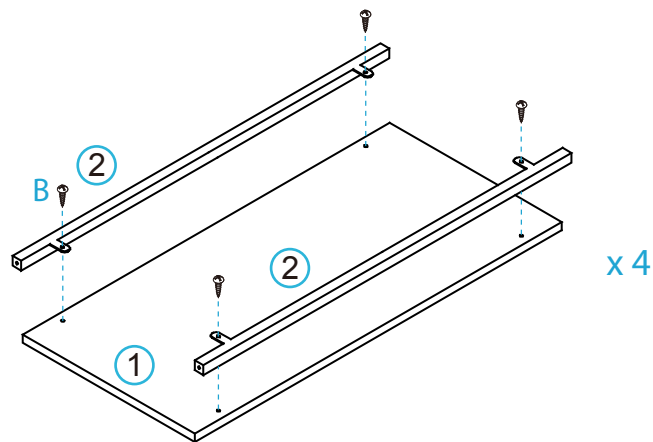

Attach 8x panels [2] to 4x panels [1] and secure with 16x screws (B). Tighten with a screwdriver.

2

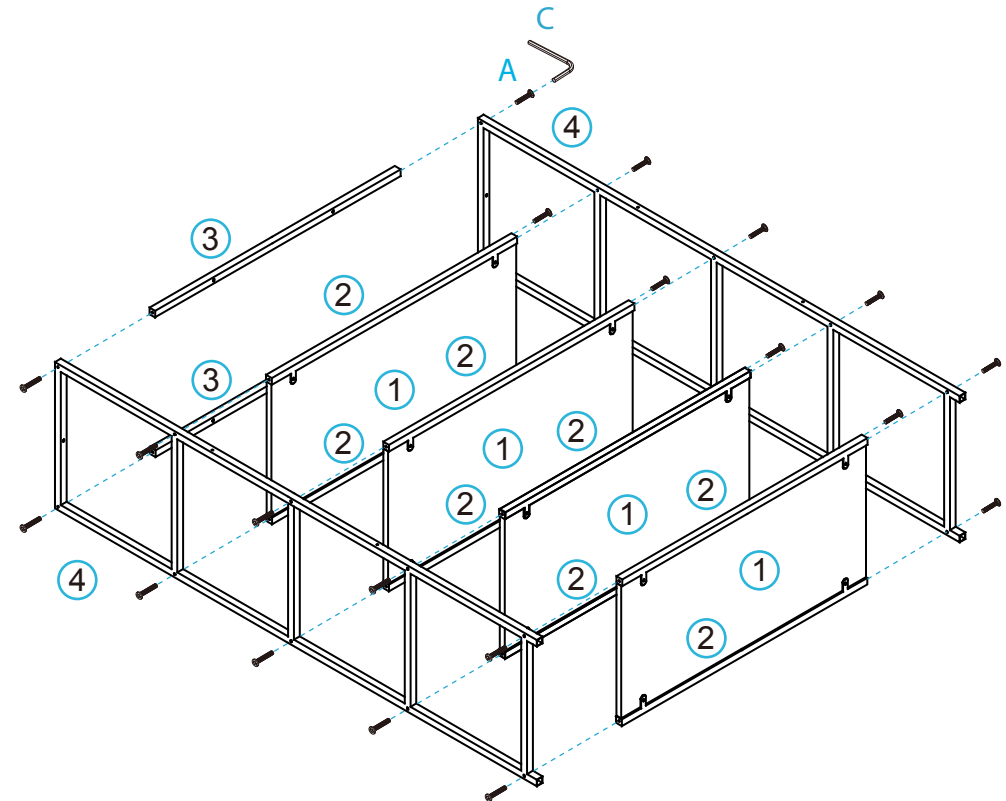


Attach 2x panels [4] to panels [2], [3] and [1] and secure with 20x bolts (A). Tighten with an Allen key (C).

Dakota Bookcase

Assembly Instructions


mocka

3

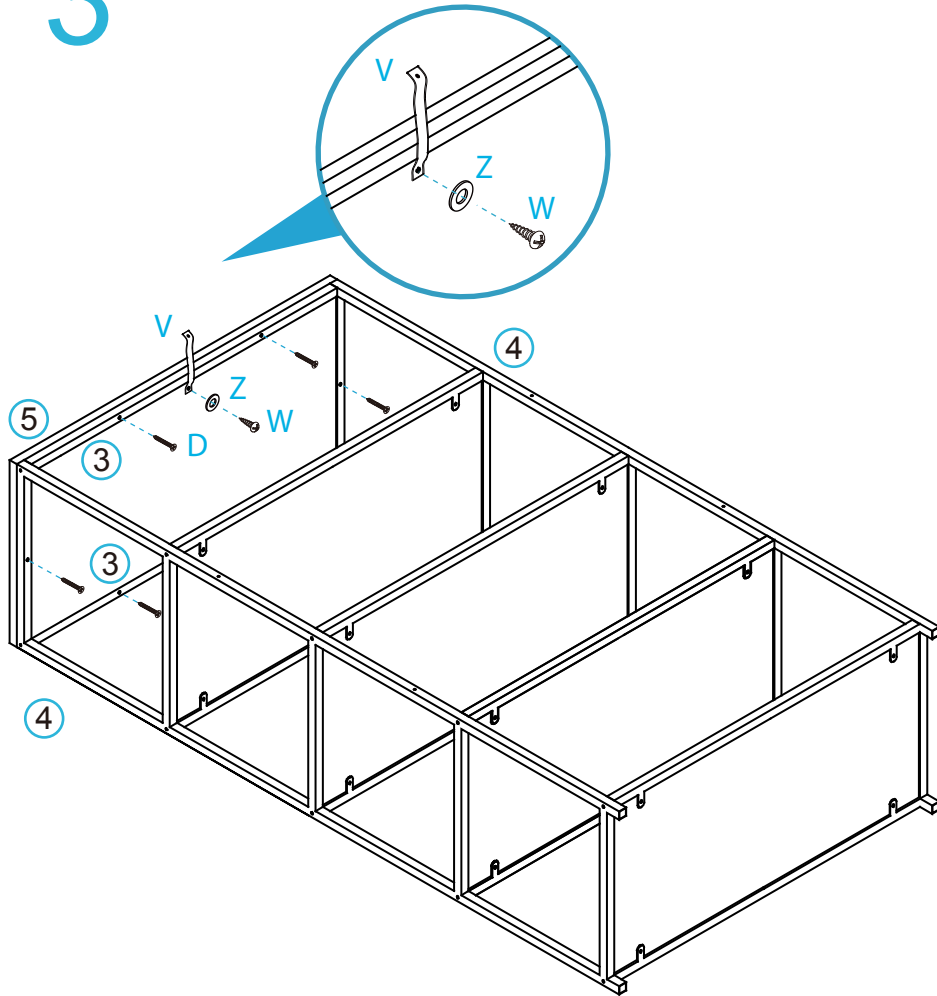

Attach panels [3] and [4] to panel [5] and secure with 6x screws (D). Attach 1x safety strap (V) to the top of the back side of the unit as shown using 1x washer (Z) and 1x screw (W). Tighten with a screwdriver.

4

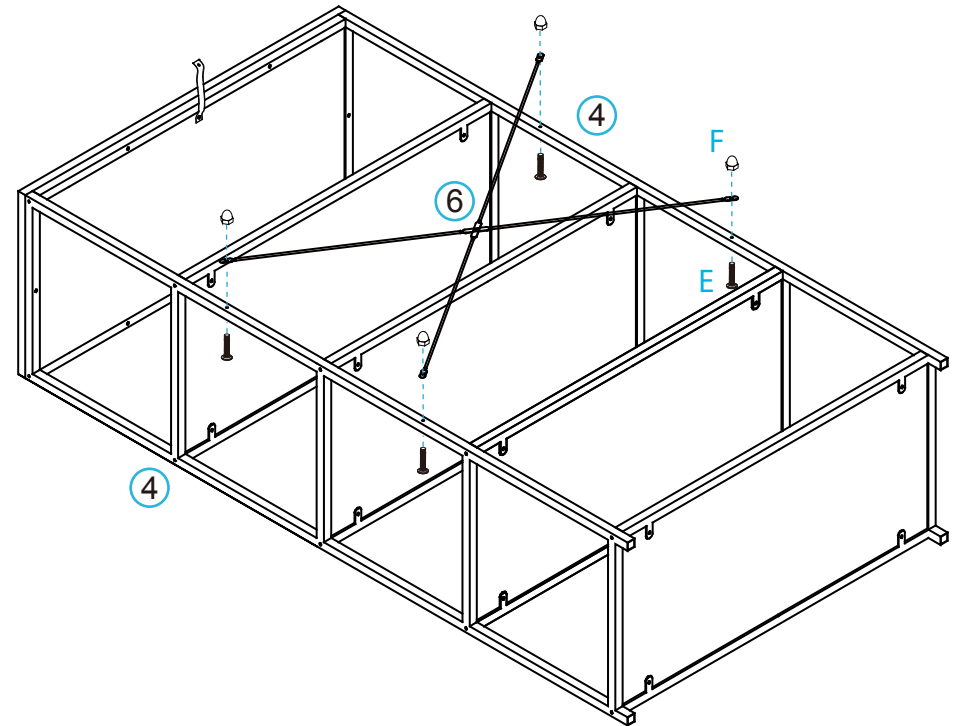


Attach 1x panel [6] to 2x panels [4] secure with 4x bolts (E) and 4x nuts (F). Tighten with a screwdriver.

Dakota Bookcase

Assembly Instructions


mocka

5

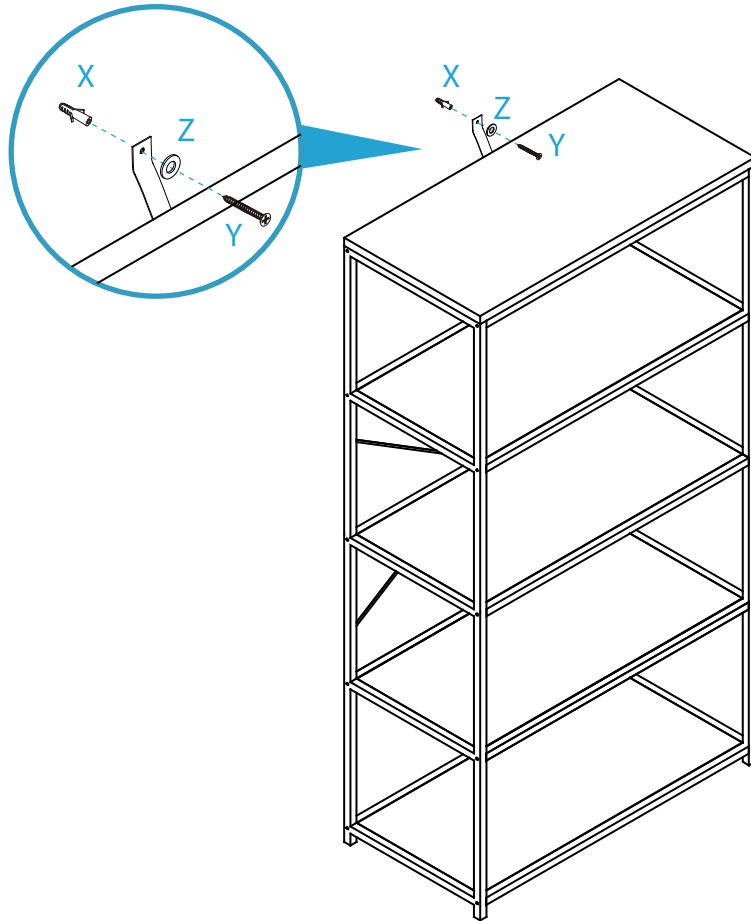

Once assembled lift furniture into place, do not drag. Use a drill to create a small hole lining up with the top of the safety strap (V). Fasten to the wall using 1x washer (Z), 1x wall anchor (X) and 1x wall screw (Y).

6

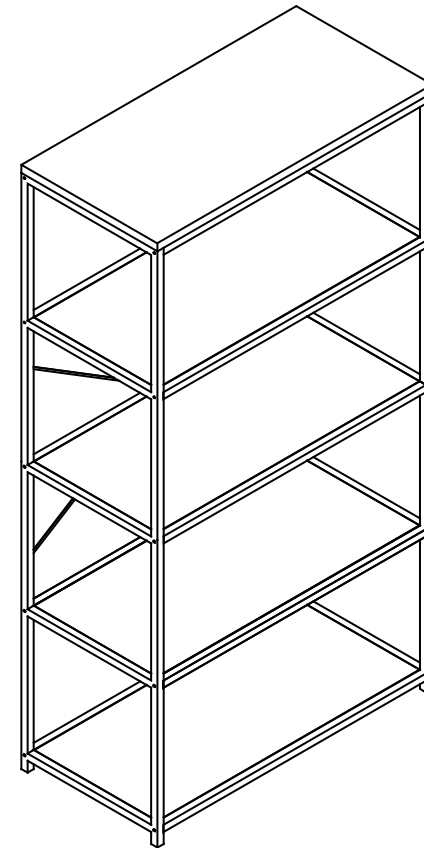

Ensure unit is balanced and steady before use. You're done, enjoy!