

# Felt Headboards


## Assembly Instructions

# mocka

Thank you for your purchase.  
Please follow the instructions below for correct assembly.



**WARNING:** Small parts are used to mount the Headboard.  
Keep all small parts away from children.  
Adult assembly only.

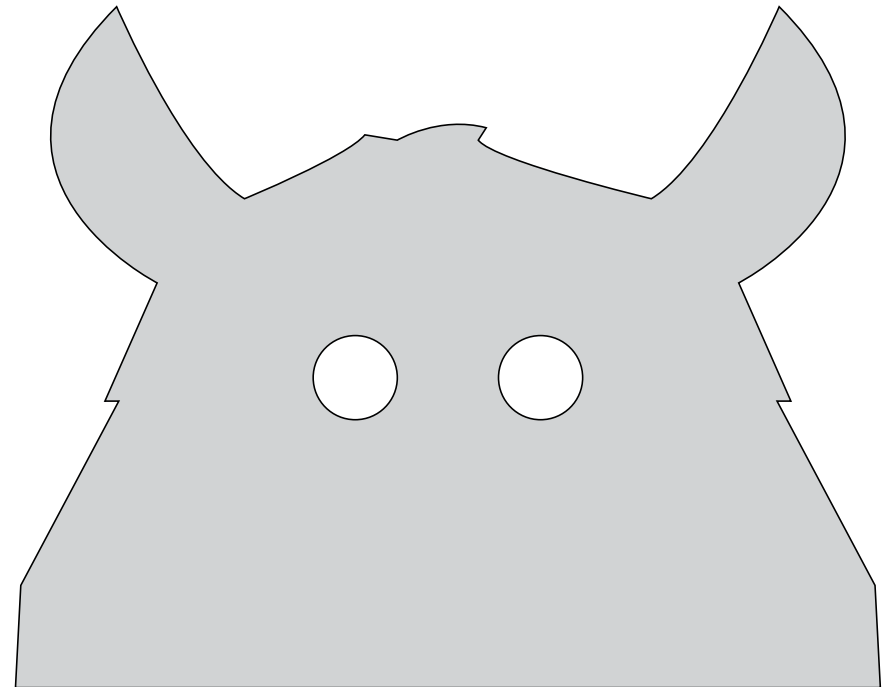

Important tips to follow when applying 3M Velcro

1. Wait 7 days after painting before use
2. Do not apply 3M Velcro to paper or soft surfaces on the wall
3. Remove any hanging hardware from the wall
4. Each pair of strips can hold 0.45KG


**WARNING:** Failure to follow instructions carefully may cause damage.

# Felt Headboards

## Assembly Instructions


mocka

1

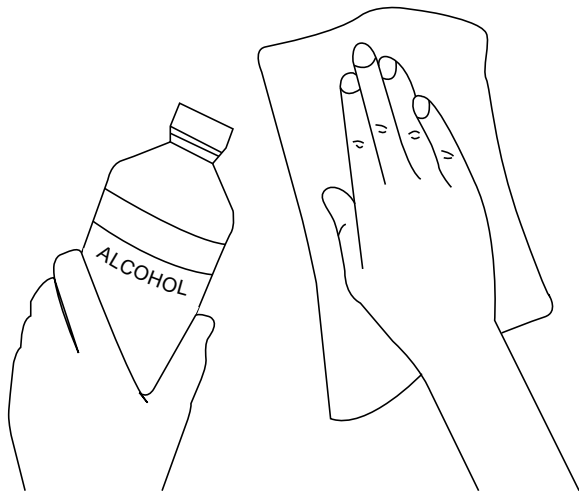

Clean the wall with rubbing alcohol. Don't use household cleaners like wipes or sprays because they leave behind a slippery residue.

2

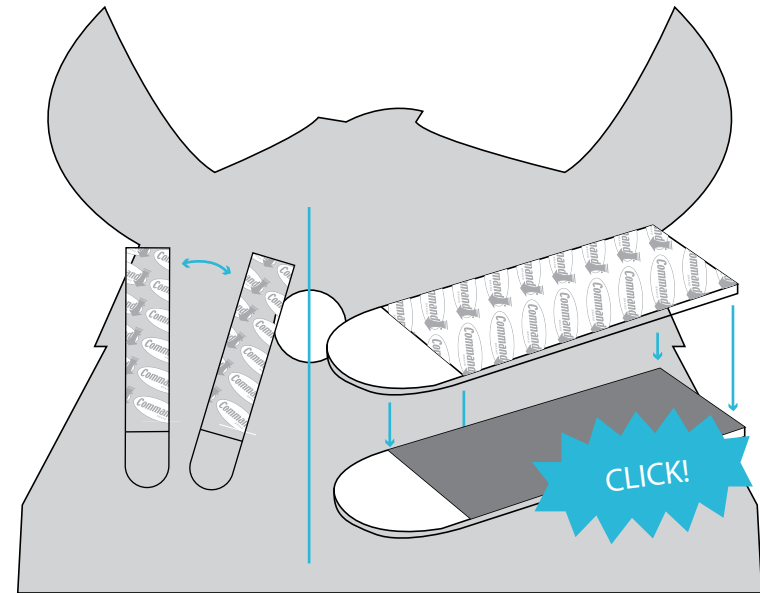


Separate strips. Press two strips together until they click.

# Felt Headboards

## Assembly Instructions


mocka

3

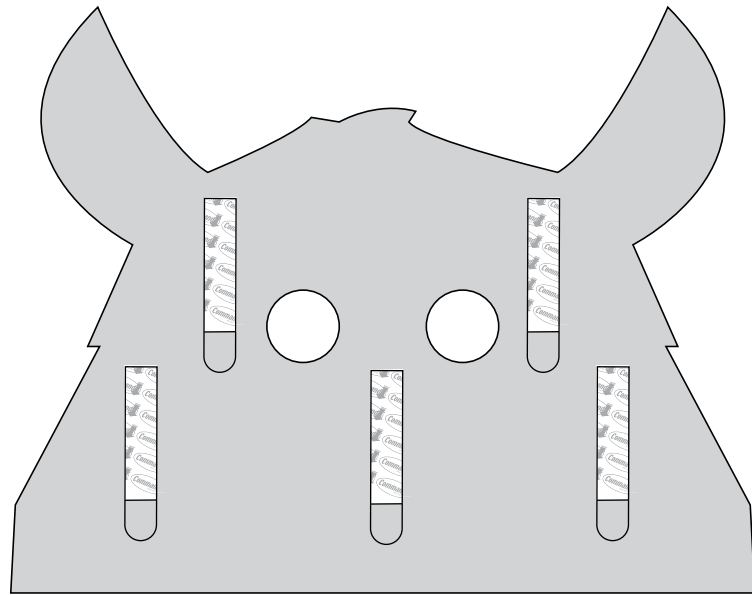

Arrange the strips on the back of the Headboard as shown. Remove one side of the cover on the strip. Place the sticky side of the strips on the surface of the headboard. Press down firmly.

4

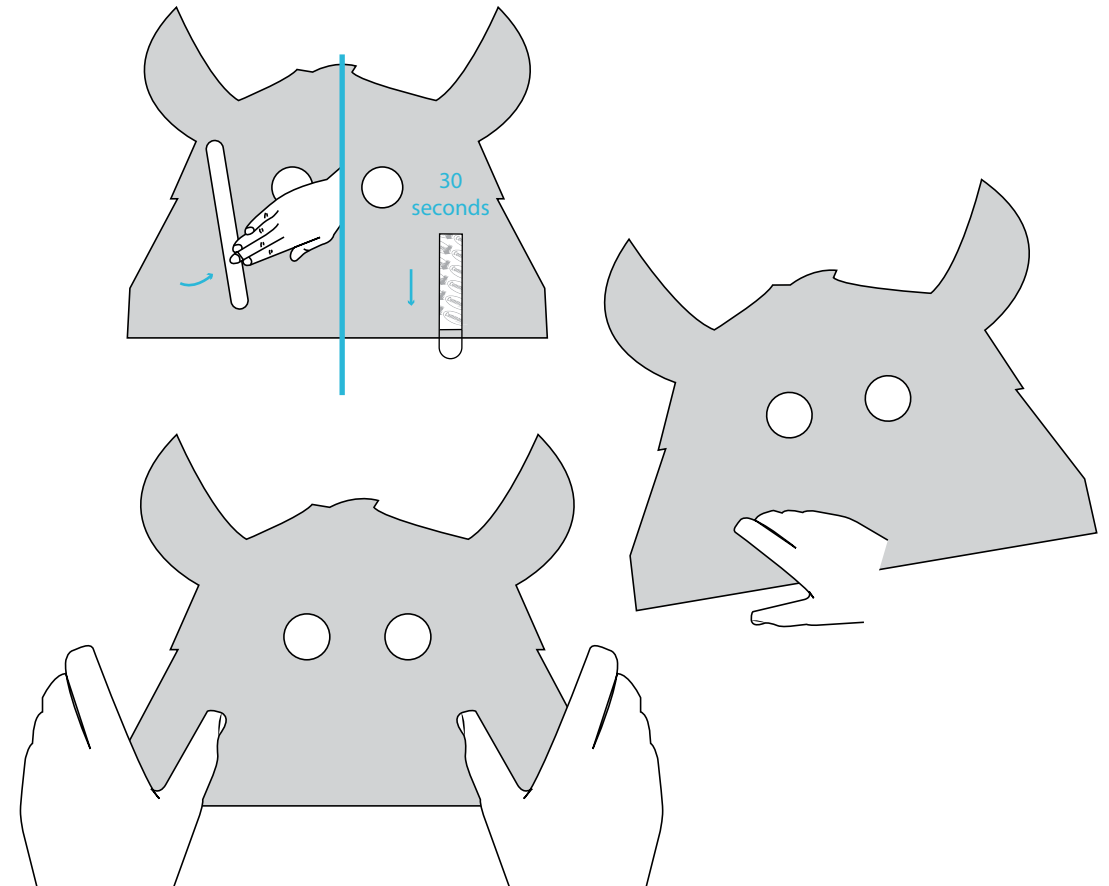


Remove the cover from the other side of the strips and press the Headboard onto the wall. Press down firmly on each strip and hold in place for 30 seconds. You're done, enjoy!

# Felt Headboards

## Assembly Instructions


mocka

### 5 Removal

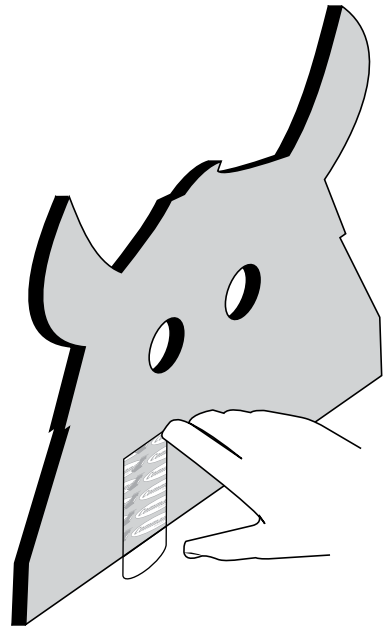

Grab the bottom corner of the Headboard and gently peel out and upwards away from the wall.

### 6

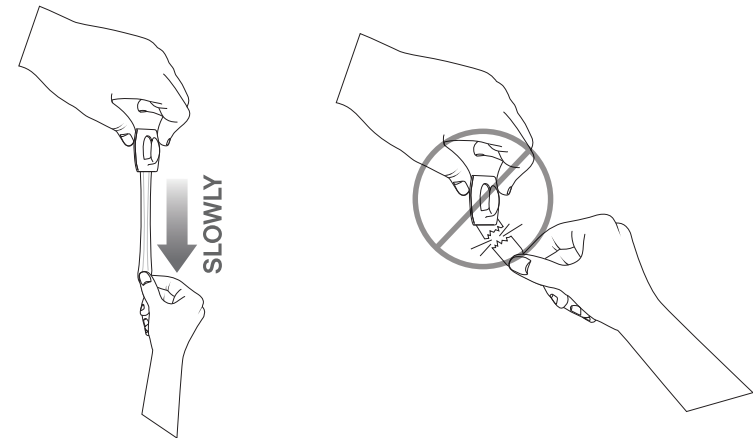

To remove the strips from the wall, slowly pull the tab straight down. Stretch the tab slowly against the wall for at least 12 inches to release. Never pull the tabs towards you as they will break and damage the wall!